

INSTRUCTIONS



MODEL : BMW F 650/800 GS

PRODUCT : FENDER EXTENDER

CODE : FE-BMWF6-8GS

CONTENTS

1 Plastic Mud Guard
2pcs. Double faced duct tape

MATERIAL SPECIFICATIONS

The product's material, made of **ABS** plastic with acrylic exterior layer, can be placed on your bike without requiring painting but if you want it painted, all paint companies have equivalent machinery at their disposal. If you want to paint it yourself, you should contact them to inform you on what you will need and how to do it.

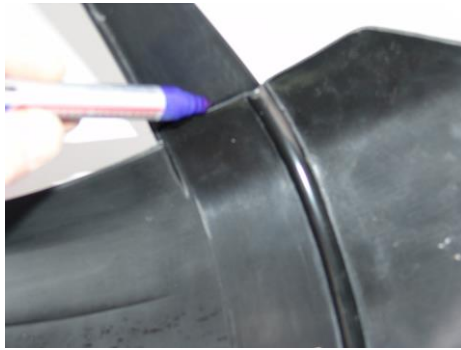


Photo No 1



Photo No 2

Placement

OUR COMPANY SUGGESTS THE INSTALLATION BE CARRIED OUT AT A WORKSHOP OR BY QUALIFIED STAFF

- Remove the front wing (You can remove only the rear wing) and clean it carefully with soap and water and then dry it.
- Place the mud guard on the wing to see its exact position and mark it on the outer side with a marker or tape (photo No.1)
- Clean with alcohol the whole area, from the inside of the wing..
- Remove the protective tapes from the mud guard tape and stick them together on the spot you just marked.
- Push the two pieces firmly in place along the whole surface (photo No.2)
- Reposition the front wing.

Important Notice: For 5 hours do not wash your motorcycle and keep the wing clear of water and mud.

Optionally, you can also add small drops of silicone glue between the tapes but keep the silicone away from the tapes' edges.

