## **INSTALLATION INSTRUCTION**

Model	Product	Code
HONDA Monkey 125	Headlight Mask	MCR-HM



### **CONTENTS**

#### MATERIAL DESCRIPTION

- 1. 1pcs plastic mask
- 2. 4pcs screws M5X15 allen oval
- 3. 4 M5 nuts with washers
- 4. 4pcs plastic washers M5X12

The product is made of ABS plastic in glossy black color. The auxiliary parts are made of DKP metal 2mm thick painted black with electrostatic paint.

The screws, nuts, washers and all the rest required for the installation are galvanized in silver color.



These are the contents you will find inside product packaging. Also in the package you will find a card containing the link to download the PDF file with the installation instructions detailed step-by-step with photographic material.

Before starting the installation, read the instructions to have a better idea about the tools you will need and the required skills. Otherwise we suggest to contact a professional.

The product is for race use only

For any further information please do not hesitate to contact us: Tel.: +30 2108075387 Email: info@c-racer.com






Start by preparing the mask for installation. Screw the two blades on the mask as indicated on the photo.



Remove the two screws holding the headlight. You can do it step by step, begining from one side.

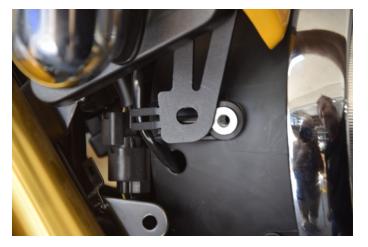

If you look at the inner side of the light it is as the photo

Without unscrewing the triangular base of the light from the motorcycle you can place it from the the back of the support base.

Manually open the light base and go through the mask support base behind the screw.



Then lead it forward so that the two teeth of the base to fit into the two notches of the light and go correctly in the hole, as demostrated. Everything is done without having to remove any other screw from the triangular base that holds the light.

# C-RACER www.c-racer.com



Once you have it in the right place, screw them back on side screws. Now these screws will also hold the mask.

Before you tighten them you have a small margin of adjustment, place it in the correct position and tighten the screws.



This will be your final look. Enjoy your rides!

