


## INSTALLATION INSTRUCTION

Model	Product	Code
HONDA Monkey 125	License Plate Holder	NP-HM

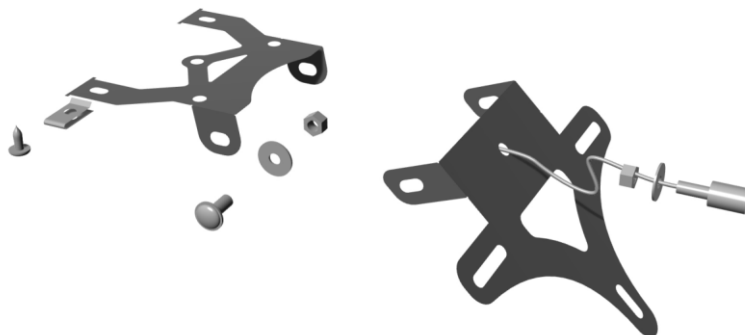


### CONTENTS

1. 2pcs Metal parts (D2-NP-HM Set 2pcs)
2. 2pcs screws M6X15 allen oval
3. 3pcs M6 safety nuts
4. 3pcs washers M6X18
5. 2pcs sheet metal needles 4X15
6. 2pcs clip drawers for sheet metal  $\Phi$ 4
7. 1pcs license plate light
1. 1tpcs cable bundle fit 4X125

### MATERIAL DESCRIPTION

The product is made of metal DKP 2mm thickness painted black with electrostatic paint. The screws, nuts, washers and all the rest required for the installation are galvanized in silver color.

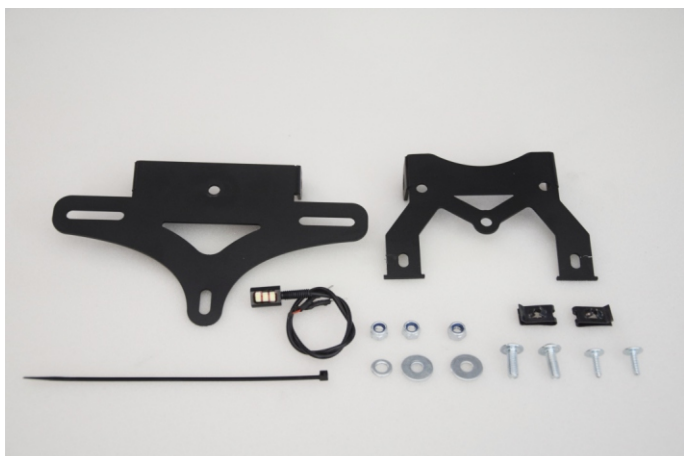

These are the contents you will find inside product packaging. Also in the package you will find a card containing the link to download the PDF file with the installation instructions detailed step-by-step with photographic material.

Before starting the installation, read the instructions to have a better idea about the tools you will need and the required skills. Otherwise we suggest to contact a professional.

**The product is for race use only**

For any further information please do not hesitate to contact us: Tel.: +30 2108075387 Email: [info@c-racer.com](mailto:info@c-racer.com)



On the front part of the canopy there are 2 clips. In order to remove those, you have to press with a small screwdriver the stud it has, slightly, to unclip the clip

---



With a small screwdriver remove the 2 clips that are right and left of the canopy..

---



There are also two screws on the back of the canopy. Remove those too now you will be able to remove the cover.

---



With a small screwdriver insert it into the slot of the plug and press the clip open to remove the plug that connects the light of the license plate.

---



Now you need to remove the old license plate base, start by removing the 3 screws on the bottom.



Remove the entire rear fender. Save it if you want in case you want to restore it to its original form.



What you see in the photo are the components which you will put back on your motorcycle.



Join the two parts of the sign, with the screws that are in the package, as shown in the photo.



Insert the two drawer clips as shown in the photo. It requires pressure to be able to snap.



To complete the base preparation, place the light from the package.



Place the entire base on the motorcycle and screw it with the screws at the place of old one. Also keep the cable ties without tightening.



The light has two ends that you have to plug in where the old light was connected.



Before doing anything else test the light if it switches on. You may need to reposition the cables to light up.



Adjust the dial you want the base to have and tighten it very well. Also stretch the light wire, press to fit and trim the extra.



Place the canopy to its original position. Screw first the rear screws.



And finally put the clips on the front of the canopy.



In case you want to fold the license plate, you have to unscrew the two side screws and then turn to retighten. Do not try to rotate it without unscrewing it because you will damage the base. You are not recommended to have it folded because it is illegal.



This will be your final look. Enjoy your ride!

---