


INSTALLATION INSTRUCTION

Model	Product	Code
HONDA X ADV 750 2021+	Chain Guard & Shark Fin Guard	CG-HXADV21

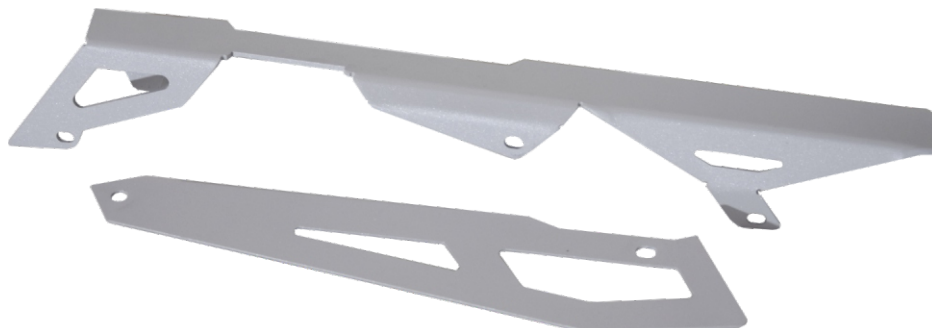


CONTENTS

1. 2 pcs alouminio (A3-CG-HXADV)
2. 6 pcs M6X15 Allen screws with round head

MATERIAL DESCRIPTION

The product is made of 3mm aluminum painted with black or silver electrostatic paint. The screws are galvanized.

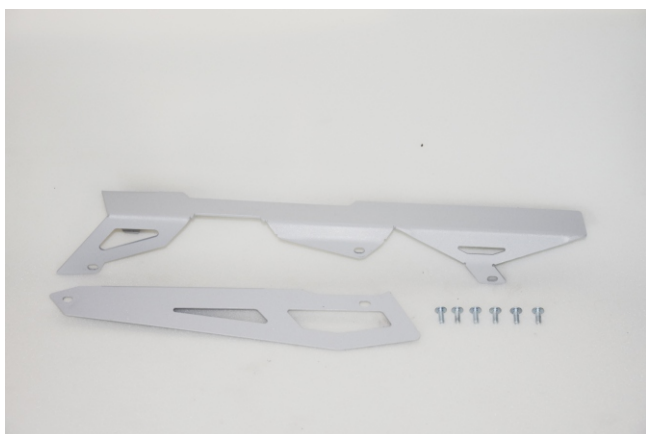

These are the contents you will find inside the product package as well as a card containing the link to download the leaflet with the detailed installation instructions and step-by-step rich photographic material.

Before starting the installation, read the instructions carefully so that you know if you have the right tools and skills, otherwise contact a professional.

The product is for race use only

For any further information please do not hesitate to contact us: Tel.: +30 2108075387 Email: info@c-racer.com



First remove the screws holding the chain guard.
Don't forget the inside one on the fork.



Remove the chain guard and keep it in case
you want to restore it in the future.



In the same position place the new chain guard with the
new screws.



In the two holes below screw the
new Shark Fin Guard.



This will be your final result. Have a nice ride.