

## INSTALLATION INSTRUCTION

Model	Product	Code
HONDA X ADV 750 21+	Fender Extender	FE-HXADV21



### CONTENTS

1. 1pcs Plastic part
2. 5pcs Double tape

### MATERIAL DESCRIPTION

The product is made of ABS plastic in glossy black color  
The accessories are with very strong double side tape.




These are the contents you will find inside the product package as well as a card containing the link to download the leaflet with the detailed installation instructions and step-by-step rich photographic material.

Before starting the installation, read the instructions carefully so that you know if you have the right tools and skills, otherwise contact a professional.

**The product is for race use only**

For any further information please do not hesitate to contact us: Tel.: +30 2108075387 Email: [info@c-racer.com](mailto:info@c-racer.com)

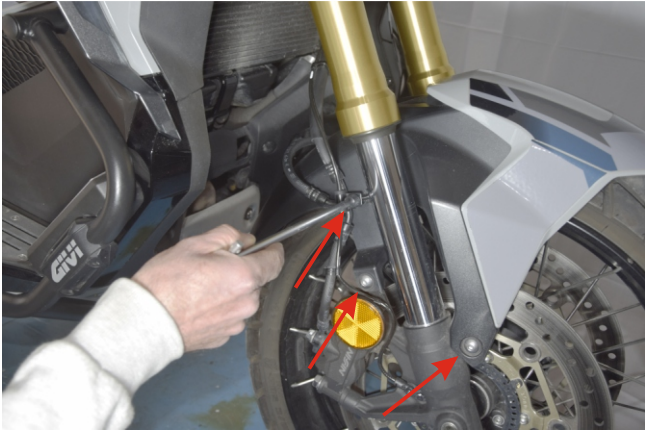

Remove the front fender as shown in the photo.  
Turn it upside down and wash it very well to remove all dirt and mud and then dry it.  
After it dries, clean the back very well with alcohol and let it dry completely.

---



Place the Extender in place, align it and make a mark in the upper part so that you know its position.  
Make sure the alcohol has dried and the surface is clean, do not touch it with your hands because you might get it dirty.

---



Remove the protective films from the tapes.  
You should not touch them at all.

---



Now you can put the extender in place.  
Start at the top, where you had marked it.  
Press very hard in all places so that the film sticks.  
If you want you can add silicone on the top so that mud does not pass between the films.

---



This will be your final result.  
Happy and safe rides.