


INSTALLATION INSTRUCTION

Model	Product	Code
HONDA X ADV 750 2021+	Foot Rest	FR-HXADV21

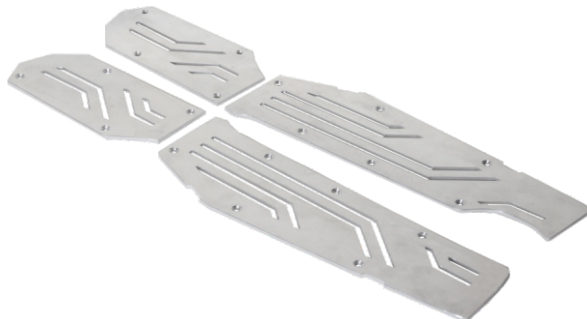


CONTENTS

1. 4 pcs Alouminio parts (A3-FR-HXADV-SET)
2. 20 pcs M4X20 Allen screws, countersunk head
3. 20 pcs M4 rubber nuts

MATERIAL DESCRIPTION

The product is made of 3mm aluminum with double electrostatic paint in silver color.
The screws are galvanized and the nuts are rubber & iron.

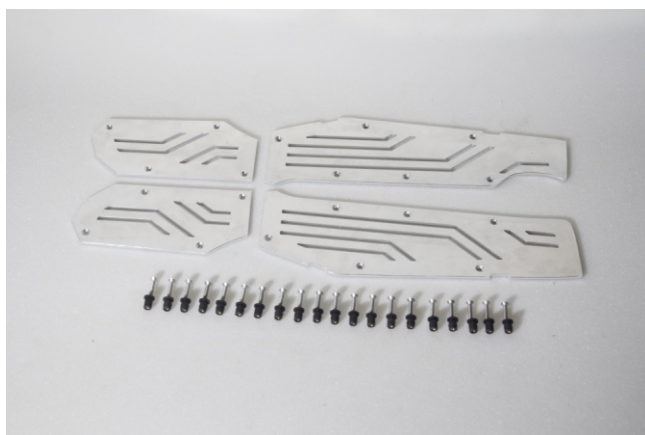

These are the contents you will find inside the product package as well as a card containing the link to download the leaflet with the detailed installation instructions and step-by-step rich photographic material.


Before starting the installation, read the instructions carefully so that you know if you have the right tools and skills, otherwise contact a professional.

The product is for race use only

For any further information please do not hesitate to contact us: Tel.: +30 2108075387 Email: info@c-racer.com



Remove the rubber cover on the base of the foot step.
No tools are required, just pull it up and it will come out.

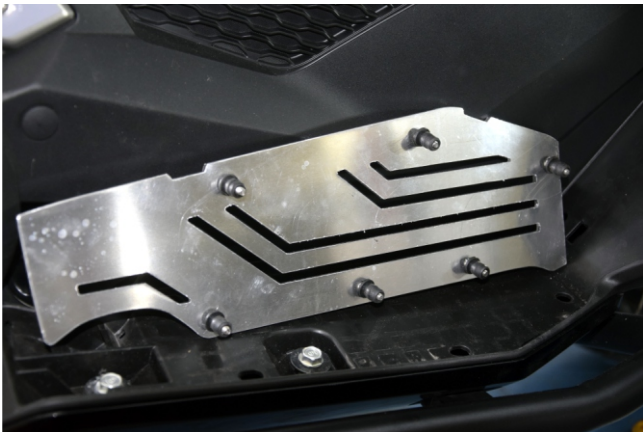

Install the screws and nuts on all parts as shown in
the photo .



Place each part in place, making sure they
go through the corresponding holes on the base.



Fasten the screws while pressing the part down,
so as the nuts do not turn, as
shown in the photo.
Make sure you tighten all the screws very well.



This will be your final result.
Have a nice ride.

