

INSTRUCTIONS



MODEL : KTM SMT 990 07

PRODUCT : FENDER EXTENDER

CODE : FS-KTMSD/07

CONTENTS

Plastic mud guard
3M VHB Tape

MATERIAL SPECIFICATIONS

The product's material, made of **ABS** plastic with acrylic exterior layer, can be placed on your bike without requiring painting but if you want it painted, all paint companies have equivalent machinery at their disposal. If you want to paint it yourself, you should contact them to inform you on what you will need and how to do it.

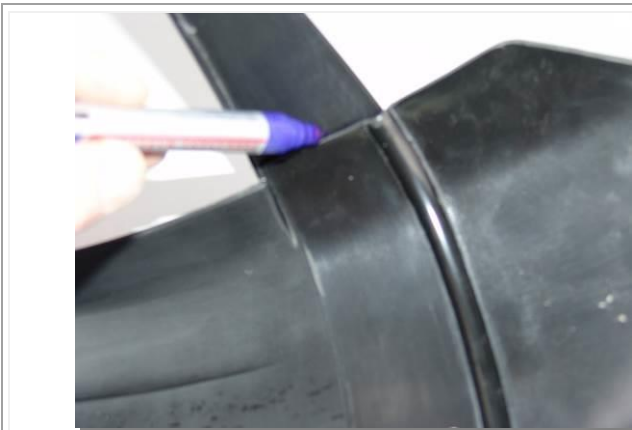


Photo No 1



Photo No 2

Placement

OUR COMPANY SUGGESTS THE INSTALLATION BE CARRIED OUT AT A WORKSHOP OR BY QUALIFIED STAFF

- Remove the front wing, clean it carefully with soap water and then dry it.
- Place the mud guard on the wing to find its exact location and mark it on the outer side with a marker or tape (Photo No 1).
- Clean the area with some alcohol (inner side of the fender).
- Remove the protective film of the 3M tape and stick it on the spot you have marked.
- Remove the protective membrane from the hugger.
- Press the two pieces firmly in place along the whole surface (Photo No 2).
- Reposition the front wing.

IMPORTANT NOTICE: for the next 5 hours do not wash your motorcycle and keep the wing clear of mud and water. Optionally, you can also add small drops of silicone glue between the tapes but keep the silicone away from the tapes' edges.

