



**C-RACER**  
www.c-racer.com

# INSTRUCTION

Model	Product	Code
Royal Enfield Interceptor 650 Royal Enfield Continental GT 650	Front Fender Scrabler	FF-RE-SCRAB


You are advised to read the instructions carefully, before you proceed to any changes.  
Any modifications on your motorcycle should be performed by specialized personnel,  
however the installation process of this product is quite easy if you follow the instructions below.

## CONTENTS

- 1 X Plastic Fender
- 2 X screws M6X10 (allen)
- 2 X screws M6X15 (allen)
- 4 X washer M6X10 (6x12)



Undo the old fender from the bridge as shown in the left-hand photo and remove it.

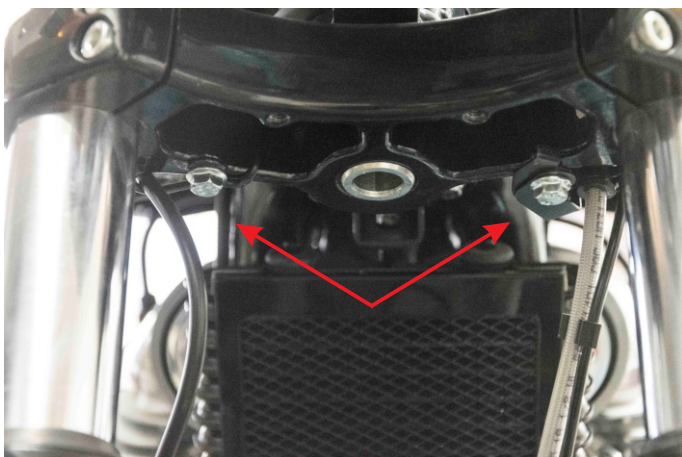

Undo the screws that the arrows in the left-hand photo show you and remove them. Keep the support covers that hold together the tubes- wires as we will use them later on.



3-4



Put the fender in place and slide through the rear left screw. The cover support that holds the break tube, should be placed in between the fender and the triple clamp.



Repeat the same procedure on the right hand as well, placing once more the cover support of the break tube in between the fender and the triple clamp.

5



Place the front screws in the threads of the lower triple clamp and proceed to tighten all four screws tightly.



If you wish, you can remove the bridge from the old fender and use it with the newly placed fender. The end result should appear as in the photo. Thank you for choosing one of our products.

**The product is for race use only**

For any further information please do not hesitate to contact us: Tel.: +30 2108075387 Email: [info@c-racer.com](mailto:info@c-racer.com)