



INSTRUCTION

| Model | Product | code |
|---------------------|--------------|------|
| SUZUKI SV 650 2016+ | FRONT FENDER | FFSV |

CONTENTS

- 1 X plastic fender
- 2 X allen screws M6X30
- 2 X hexagonal screws M6X10
- 2 X security nuts M6
- 4 X washers M6X18


Remove the old fender. The brake tube needs to be undone from the internal side of the fender.

Place the two big screws (M6X30 allen) on the front part of the fender so as they don't protrude from the inside of the fender.

Position the fender and press on the sides, as shown in the photo, so you can slide it through the forks, while making sure it passes through underneath the brake tube.

Tighten the screws on the backside with the washers.

Tighten the clip (in the special socket) that holds together the brake.

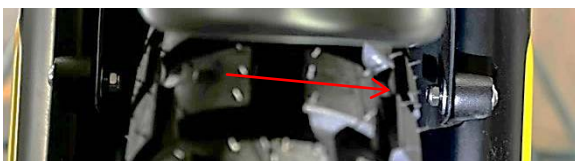

Place the nuts and washers and tighten the front screws.

