



Model	Product	code
SUZUKI SV 650 2016+	REAR NUMBER PLATE	NPSV

CONTENTS


- 1 X pair of number plates (NP-SSV650)
- 6 X allen round-head screws M6X15
- 2 X allen round-head screws M4X10
- 2 X safety nuts M6
- 2 X safety nuts M4
- 4 X washers M6X18
- 2 X washers M6X12



Place together the two number plates parts using the screws you will find in the included fitting kit. Place the turn lights (the originals or from free market) and the tail light (from free market).



First remove the wires that attach the turn lights and the number plate light. Undo the 4 screws which are located on the bottom part of the bike's tail. This way you have removed the bike's mud guard.

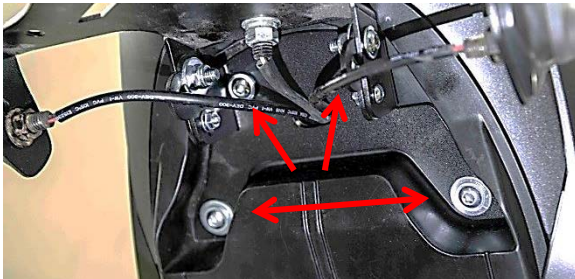

Run through the wires first and then place the new number plate in the old plate's position and screw it on. Use the 2 small washers on the 2 rear screws. Tighten the screws well and connect the turn light wires with the tail light.



If you wish to fold the number plate you don't have to remove it from its base. Remove the two small screws and slacken the two side screws. Rotate it to the position you prefer and put back the two small screws.